



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA SATELLITE C640. You'll find the answers to all your questions on the TOSHIBA SATELLITE C640 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TOSHIBA SATELLITE C640**

**User guide TOSHIBA SATELLITE C640**

**Operating instructions TOSHIBA SATELLITE C640**

**Instructions for use TOSHIBA SATELLITE C640**

**Instruction manual TOSHIBA SATELLITE C640**



[Your user manual](#)

[TOSHIBA SATELLITE C640](#)

**Manual abstract:**

5-inch diskette here Using the touchpad The EZ Pad™ consists of a touchpad, two buttons, and a rocker switch. Use the touchpad to move the pointer on the screen. Use the EZ Pad buttons to select objects. Use the rocker switch to scroll your screen up and down. To move the pointer on the screen USB ports Plug a USB (Universal Serial Bus) device (such as a scanner or digital camera) in here Ethernet jack Plug a 10/100 Ethernet network cable in here Left Battery charge indicator This LED lights up when the notebook is plugged in and shows battery activity and status Power indicator This LED lights up when the notebook is turned on and shows the notebook power status Modem jack Plug a modem cable in here IEEE 1394™ port Plug an IEEE 1394 (also known as Firewire™ or i.Link™) device (such as a digital camcorder) in here Microphone jack Plug a microphone in here Headphone jack Plug headphones or amplified speakers in here Touchpad click click, click Back Parallel port Plug a parallel device (such as a printer) in here Power connector Plug the AC adapter cable in here Right To select an object on the screen To start a program or open a file click then drag press & hold To move an object on the screen Monitor port Plug an analog VGA monitor in here Kensington™ lock slot Secure your notebook to an object by connecting a Kensington cable lock here Left touchpad button Ventilation fans Helps cool internal components. Do not block or insert objects into these slots. CD/DVD/Recordable drive Depending on what you ordered, you may have a drive for playing CDs or DVDs or recording CDs Rocker switch Right touchpad button To access a shortcut menu or find information about a screen object Getting help Gateway offers a number of options for additional help and information: Status indicators Multi-function buttons Navigation/Volume keys Press these to move the cursor or to adjust volume Arrow/LCD brightness/ Volume keys Press these to move the cursor or to control screen brightness Application key Press this for quick access to shortcut menus and help assistants in Windows Bottom Memory bay Install as many as two memory modules here System label Includes the product model number Serial number label Includes your notebook's serial number Reset hole Insert a straightened paper clip here to manually restart the notebook Hard drive bay The hard drive kit is located here Keyboard Power button Function/System keys Numeric keypad Press these to type numbers when the numeric keypad is turned on FN key Press this along with a colored system key to perform a specific action Windows key Press this to start the Windows Start menu Refer to your documentation For information about using your Gateway notebook, click Start, All Programs, Gateway Documentation, then click Gateway 400 User's Guide. Check HelpSpot (WindowsXP only) For information about using your Gateway notebook, click Start, then Help and Support. Click the Pick a Topic area for more information about your Gateway 400 notebook. Battery latch Slide to release the battery Check Gateway eSupport For help and information about common issues, check out Gateway's Technical Support on the Web at [www.support.gateway.com](http://www.support.gateway.com) Call Technical Support To use an automated menu system and your telephone keypad to find answers to common problems, call 800846-4526 (U.S. ) or 877-709-2951 (Canada). To talk to a Gateway Technical Support representative about a non-tutorial technical support question, call 800846-2301 (U.S.) or 800-846-3609 (Canada and Puerto Rico)..



[Your user manual](#)  
[TOSHIBA SATELLITE C640](#)